


How to set the wireless signal on and off of Ceres WR136G

Device Model No.:WR136G


Question Category:Wireless Setting

1 Log in to the router management page


1. Open the browser, enter **management IP** (refer to the sticker on the bottom of the router) or "**www.ceres.com**" in the address bar, click Enter or Return Key to enter the router login page, the factory login password is **admin** (refer to the sticker on the bottom of the router), click Login button.

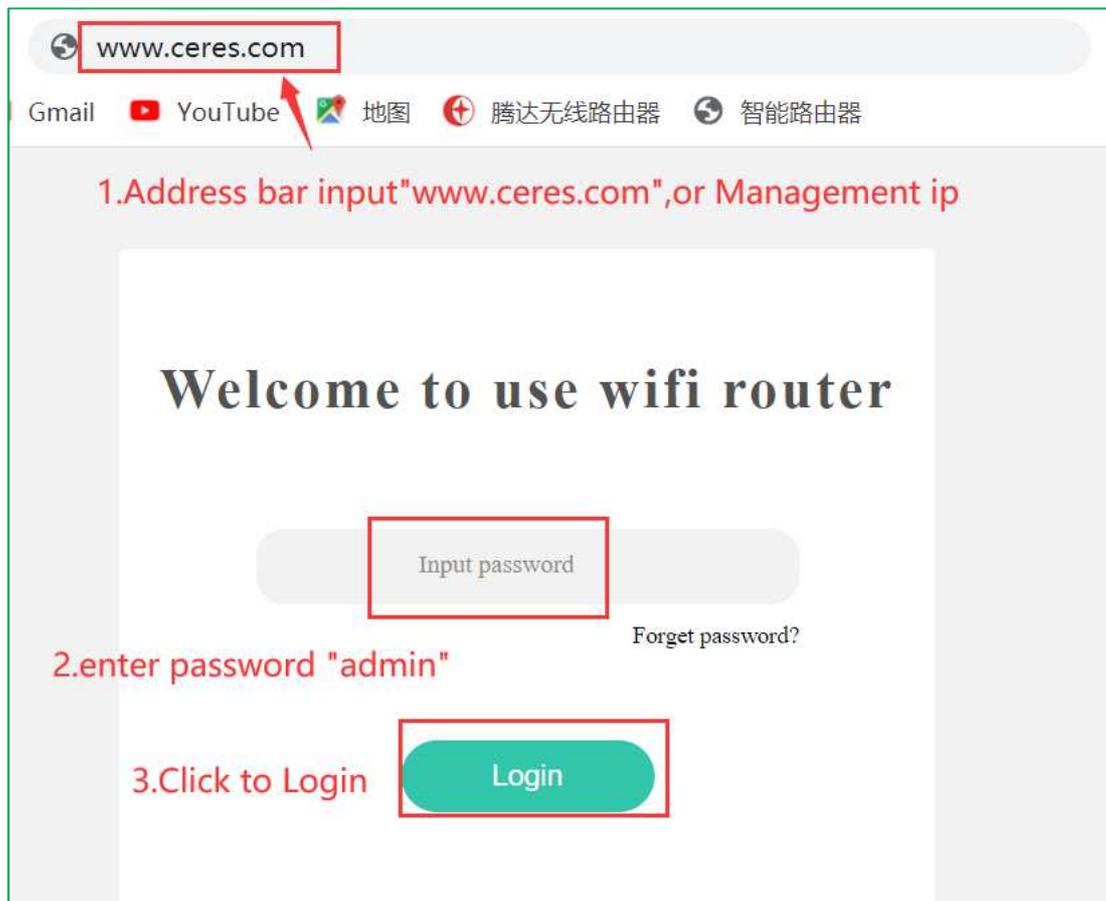

1. Click "**Wireless Settings**" in the menu bar, click "**2.4G WIFI wireless name and password**", "**5G WIFI wireless name and password**"

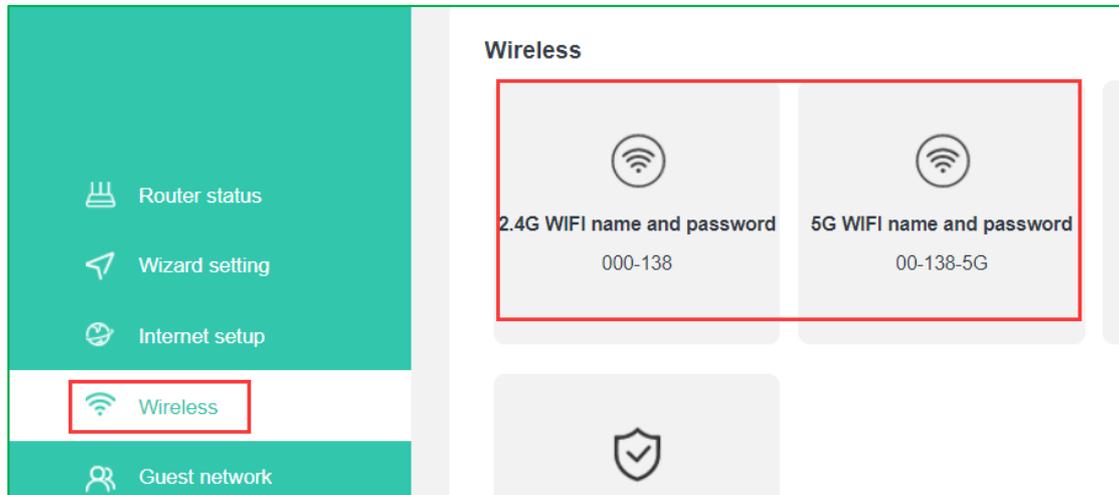

2. Turn on the wireless signal: Click the "**WiFi switch**" icon, the icon displays green "**ON**", the interface displays "**Configuring**", wait a while, the interface displays wireless information, you can turn on the wireless signal.

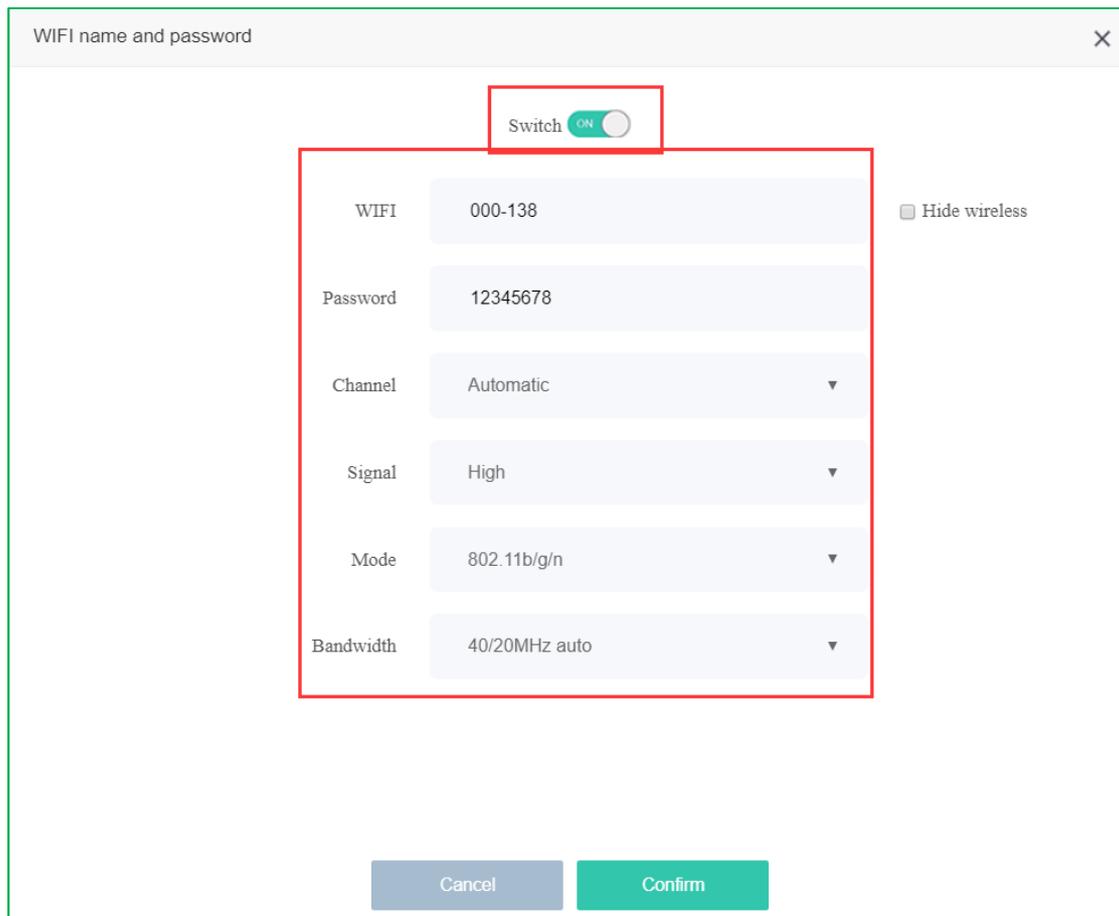

3. Turn off the wireless signal: Click the "WiFi switch" icon, the icon will be grayed out "OFF", the interface will display "Configuring", wait a while, the interface wireless information will be hidden, that is, turn off the wireless signal.

